

9	<b>Bargraph 9 RH side illuminated, engine running</b> <b>Flow meter circuit</b> XR25 aid : Illuminated engine running	Fiche n° 67 side 1/3°
---	---	-----------------------

<b>NOTES</b>	With ADAC only.
--------------	-----------------

<p>If the bargraph remains extinguished, check:</p> <ul style="list-style-type: none"><li>- The continuity between track 11 of the 12 track blue connector (E) on the passenger compartment connection unit and track (*) of the injection computer.</li><li>- (*) F3R injection on track 13 of the injection computer connector.</li><li>- (*) F4R injection on track 11 of the injection computer connector.</li><li>- (*) F9Q injection on track 32 of the injection computer connector.</li><li>- (*) L7X injection on track 15 of the injection computer connector.</li><li>- The insulation on track 11 of the 12 track blue connector (E) on the passenger compartment connection unit.</li></ul>
--